

Innovative New Method of Formaldehyde Measurement



Detachable Sensor Cartridge

- Small colorimetric sensor cartridge, 43x17x4mm (1.7x0.7x0.16in), easy-to-use, reusable*, highly accurate for passive diffusion sampling.
- Portable base unit utilizes photoelectric photometry to read the absorbance change that HCHO induces in the sensor, then re-zeros between readings.
- Sensor cartridge itself can work as a stand-alone passive sampler.
- Base unit w/sensor inserted can operate as an on-site meter for short-term (30minute) sampled measurement and/or for continuous monitoring/trend logging*.
- Base unit interfaces to GrayWolf's AdvancedSense™, DirectSense® and WolfPack™ for simultaneous display and logging of additional parameters (and for powerful annotation features).

Measurement Principle



Colorimetric reaction to exposure

Sensor element employs the chemical reaction between formaldehyde and β -diketone impregnated in a porous glass. The concentration of rutidine derivatives yellows the sensor in proportion to the formaldehyde concentration and the duration of exposure. The difference of absorbance between samples is measured by radiating a constant wavelength light (absorptiometric method) and then an algorithm converts to ppb or $\mu\text{g}/\text{m}^3$ HCHO.

* Sensor reuse depends on HCHO exposure (~4 x 30 minute tests at 1ppm, ~150 tests at 80ppb, up to 1000 tests <10ppb HCHO)

FM-801

Formaldehyde Multimode Monitor



GRAYWOLF®
SENSING SOLUTIONS
PH. 1-203-402-0477
FAX: 1-203-402-0478

EMAIL:
SALESTEAM@GRAYWOLFSENSING.COM

WEBSITE:
WWW.GRAYWOLFSENSING.COM

FM-801

Formaldehyde Multimode Monitor

Specifications

| | |
|-------------------------|---|
| Model Name | FM-801 |
| Detection Principle | Photoelectric Absorptiometric |
| Detection Range | <20ppb to 1,000 ppb, < 25 µg/m ³ to 1230 µg/m ³ |
| Accuracy | +/- 4ppb <40ppb, +/- 10% of reading ≥40ppb |
| Resolution | 1ppb |
| Concentration Units | ppb or µg/m ³ |
| Display | Digital LCD |
| Sampling Method | Passive diffusion sampling |
| Operating Temp. and RH* | -10 to 40°C (14 to 104°F), 20 to 90 %RH (non-condensing) |
| Sensor Shelf Life | 1 year from mfg. date (stamped on pouch) |
| Memory (base unit) | up to 250 sensors and 4500 data points |
| Power Source | 2 x AA size Alkaline batteries, or AC adapter |
| Standard Accessories | Sensor cartridge x 5 pcs, carrying case, USB connection cable, AA size batteries, WolfSense PC data transfer & reporting software |

Sensitivity to Interference Gas

| | Concentration/ Exposure duration | FM-801 readout value (ppb) |
|-----------------------|-------------------------------------|-------------------------------|
| Benzene | 2000 ppm / 8 h | 0 (<10) |
| Toluene | 2000 ppm / 8 h | 0 (<10) |
| Xylene | 2000 ppm / 8 h | 0 (<10) |
| Ethylbenzene | 2000 ppm / 8 h | 0 (<10) |
| Methanol | 2000 ppm / 8 h | 0 (<10) |
| Ethanol | 2000 ppm / 8 h | 0 (<10) |
| 1-Butanol | 2000 ppm / 8 h | 0 (<10) |
| 2-Methyl-3-buten-2-ol | 2000 ppm / 8 h | 0 (<10) |
| Acetone | 2000 ppm / 8 h | 0 (<10) |
| 2-Butanol | 2000 ppm / 8 h | 0 (<10) |
| Acetic Acid | 2000 ppm / 8 h | 0 (<10) |
| Ethyl Acetate | 2000 ppm / 8 h | 0 (<10) |
| Isoprene | 2000 ppm / 8 h | 0 (<10) |
| alpha-pinene | 2000 ppm / 8 h | 0 (<10) |
| beta-pinene | 2000 ppm / 8 h | 0 (<10) |
| Chloroform | 25 ppm / 5 h | 69 |
| Limonene | 200 ppm / 8 h | 9 (<10) |
| Styrene | 200 ppm / 8 h | 13 |
| Propionaldehyde | 200 ppm / 8 h | 13 |
| n-Nonylaldehyde | 200 ppm / 8 h | 13 |
| Benzaldehyde | 200 ppm / 8 h | 9 (<10) |
| Acetaldehyde | 200 ppm / 8 h | 22 |
| Nitrogen Dioxide | 1 ppm / 1h | -42 (<10) |
| Ozone | 1 ppm / 1h | -56 (<10) |
| Sulfur Dioxide | 1 ppm / 1h | -2 (<10) |



MEASURE SMART

REPORT EFFICIENTLY



FM-801 (on optional ACC-BELTCL-1 belt clip) shown connected to GrayWolf AdvancedSense™




Provided with GrayWolf's versatile WolfSense™ PC data transfer and reporting software. Download readings stored on the FM-801 base unit when used as a stand-alone, or when optionally interfaced to compatible GrayWolf platforms



Display real-time HCHO graphs, attach text/audio notes and access many other powerful features when interfaced to AdvancedSense, WolfPack or DirectSense WIN7/8 notebooks/tablets

CE Compliant to CE regulations

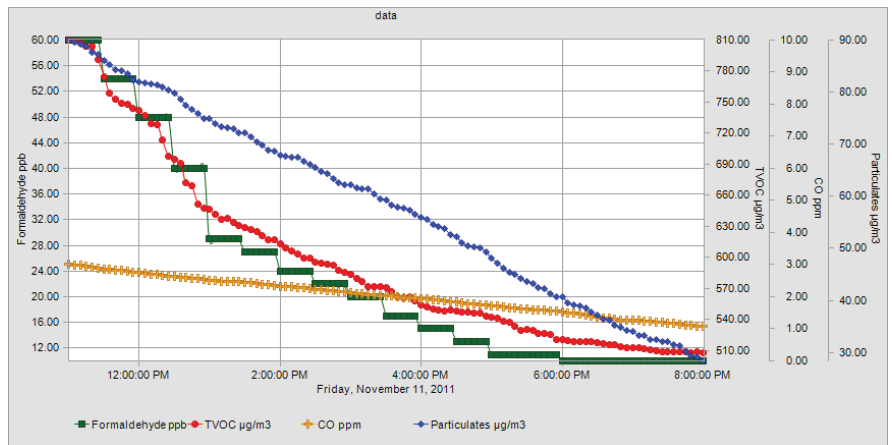

Graph formaldehyde trend logs from an FM-801; singly or together with other parameters from any compatible GrayWolf platform



GRAYWOLF SENSING SOLUTIONS

6 RESEARCH DRIVE
SHELTON, CT 06484 USA
PH. (1)203-402-0477
800-218-7997
FAX: (1)203-402-0478

EMAIL: SALESTEAM@GRAYWOLFSENSING.COM

WWW.GRAYWOLFSENSING.COM